



1、Choose Intelligent Tracking.

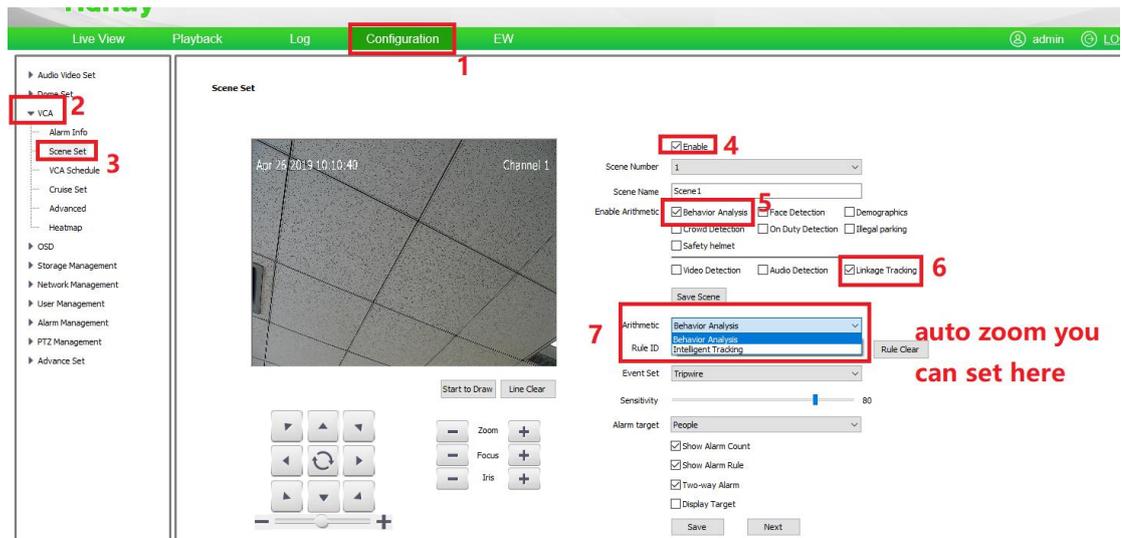

2、Set the auto zoom rate.

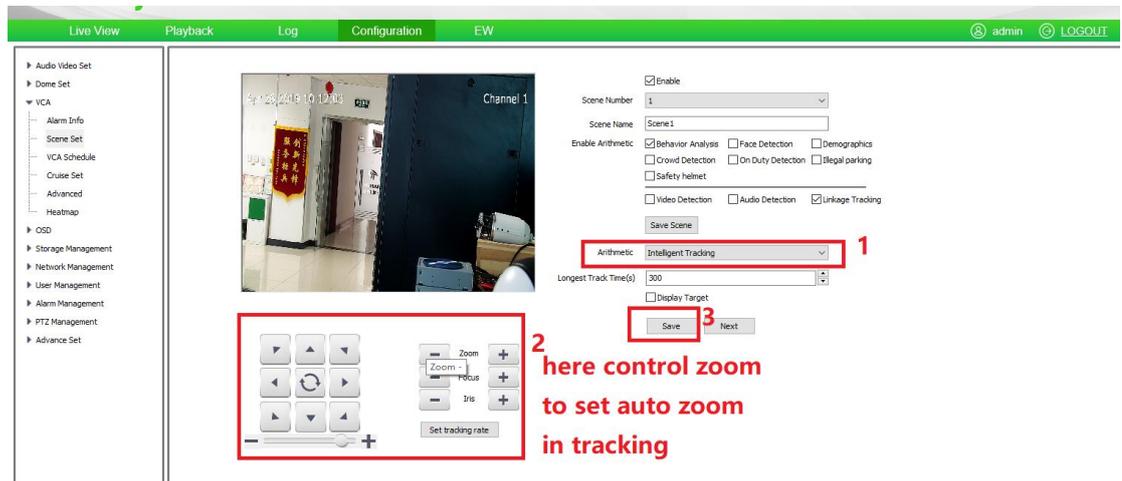

3、Auto tracking logic;

After you set the auto zoom rate, camera will change the zoom automatically depending on the angle; and you should set a right zoom, if the zoom is too big, it will easily lose tracking;

Auto tracking zoom depends on the camera angle



this angle, for example
set zoom 10X; camera will do 10X
zoom when auto tracking;

this angle will do 5x~6x
zoom when auto tracking

This picture is to show you the logic.