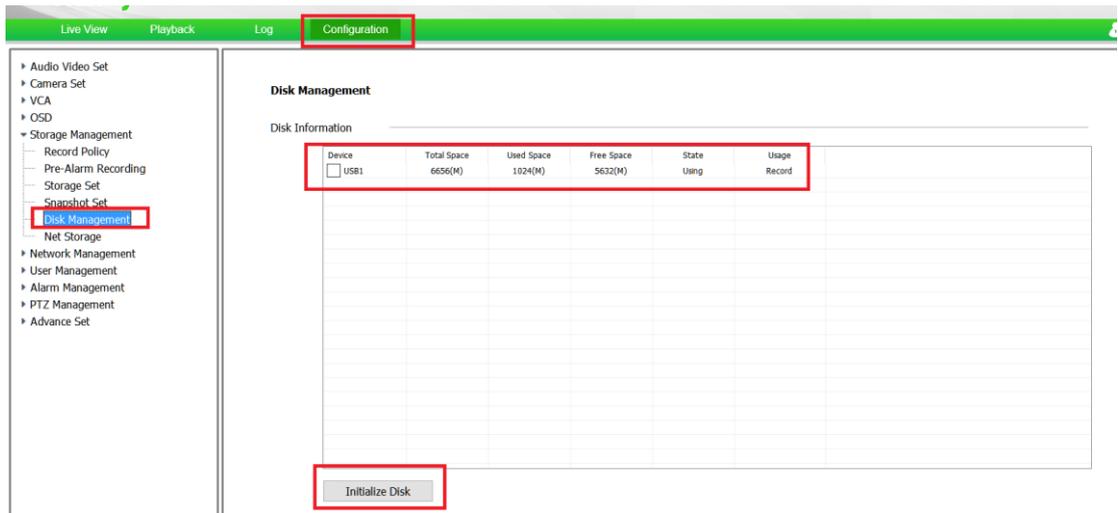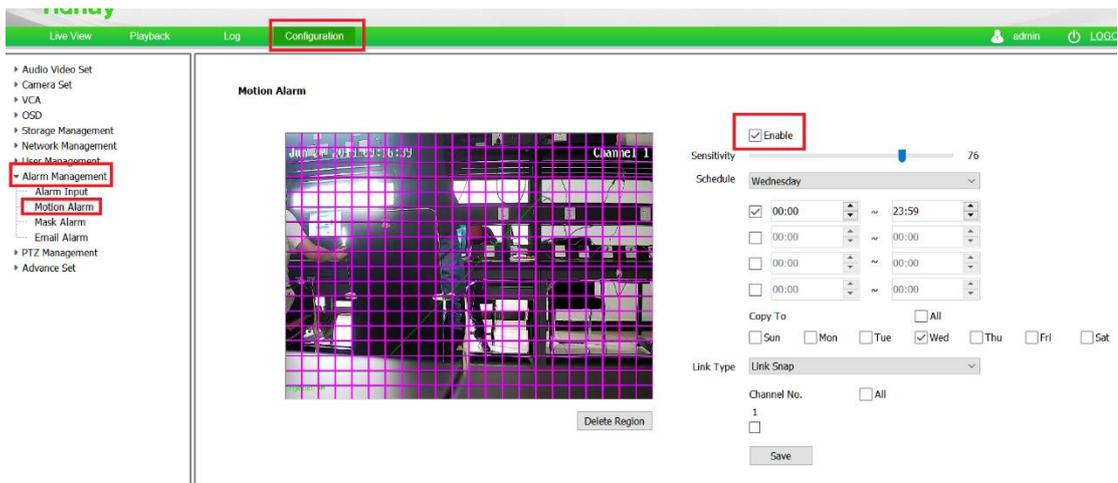1、Make sure the SD card is working，first time you need Initialize the disk;

2、Set and enable the Motion alarm.

3、Enable Alarm Rec.

4、Motion Alarm happened and finish, after 10 seconds you will see the rec.